


Telescopic Heavy Duty Post - Installation

WARNING!

Check that there are no underground pipes, electrical cables or other hazards nearby before excavating and installing the post.

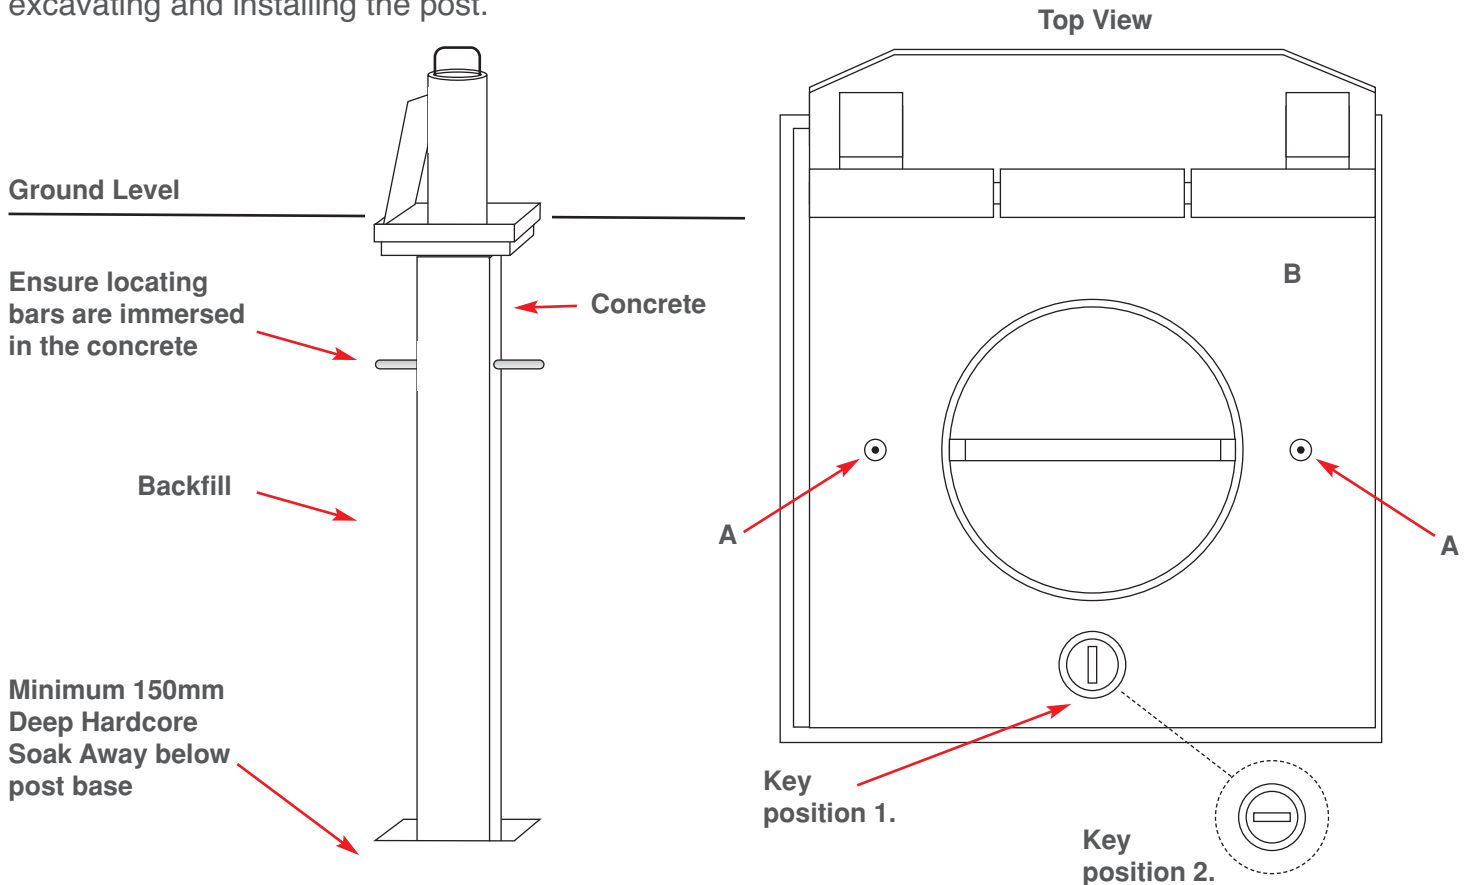

INSTALLATION

Excavate a hole deep enough to allow for at least 150mm of hardcore to be placed under the base of the outer tube to allow for drainage. Rest the post on top of the hardcore in the bottom of the hole. Ensure the post is vertical and then backfill the hole. Finally, fill the top of the hole with concrete ensuring the locating bars are immersed in the concrete.

OPERATION

1. Insert the key in the lock and turn clockwise through 90° to key position
2. Lift the post to full height, rotate 20° and allow it to locate in the upright position.
Turn the key anticlockwise through 90° to key position 1. The post is now locked.
3. Lowering the post is the reversal of this procedure.

TO REPLACE THE INNER POST

If the inner post suffers minor damage it may be removed and replaced.

1. Insert the key in the lock and turn clockwise through 90° to key position 2.
2. Unscrew and remove the two stainless steel anti-tamper screws (A) using the special tool which can be supplied separately.
3. Top plate (B) can now be removed and the centre post replaced.
4. Assembly is a reversal of this procedure.

NOTE! The key can only be removed from the lock in the key position 1.